



RHW - Переходная муфта

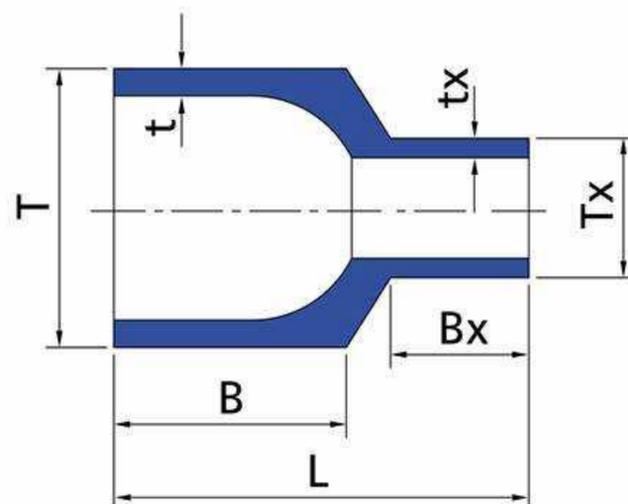


Артикул	L	B	Bx	T	Tx	t	tx
RHW-03-02	50	25	25	9.52	6.35	1	1
RHW-04-02	50	25	25	12.7	6.35	1.24	1
RHW-06-02	50	25	25	19.05	6.35	1.65	1
RHW-08-02	50	25	25	25.4	6.35	1.65	1
RHW-04-03	50	25	25	12.7	9.52	1.24	1
RHW-06-03	50	25	25	19.05	9.52	1.65	1
RHW-08-03	50	25	25	25.4	9.52	1.65	1
RHW-06-04	50	25	25	19.05	12.7	1.65	1.24
RHW-08-04	50	25	25	25.4	12.7	1.65	1.24
RHW-08-06	50	25	25	25.4	19.05	1.65	1.65

HEW - Соединительный угольник 90°

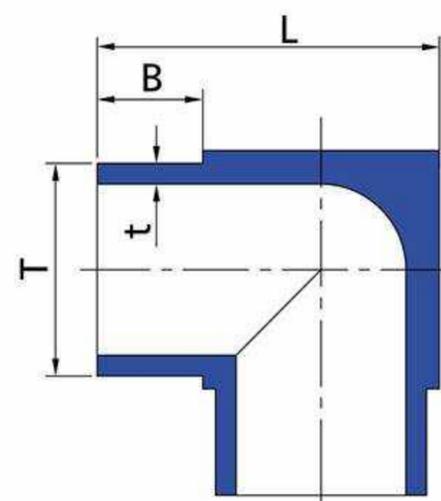


Артикул	T	L	B	t
HEW-02-0	1/4	35	20	1
HEW-03-0	3/8	35	20	1
HEW-04-0	1/2	42	24	1.24
HEW-06-0	3/4	51	24	1.65
HEW-08-0	1	59	26	1.65

НТW - Соединительный тройник

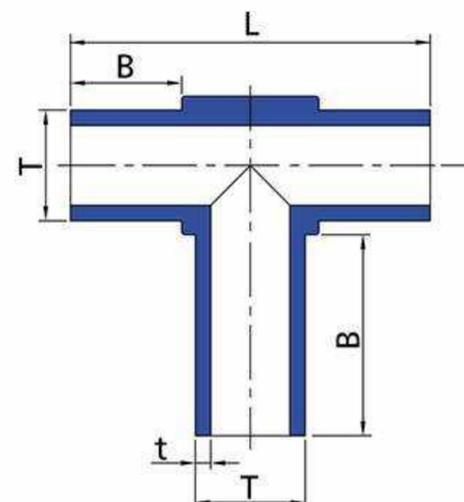

Артикул	T	L	B	T	t
НТW-02	1/4	60.5	23	6.35	0.89
НТW-03	3/8	60.5	23	9.52	0.89
НТW-04	1/2	64	23.5	12.7	1.24
НТW-06	3/4	75	23	19.05	1.65
НТW-08	1"	90	26	25.4	1.65

RНТW - Соединительный тройник

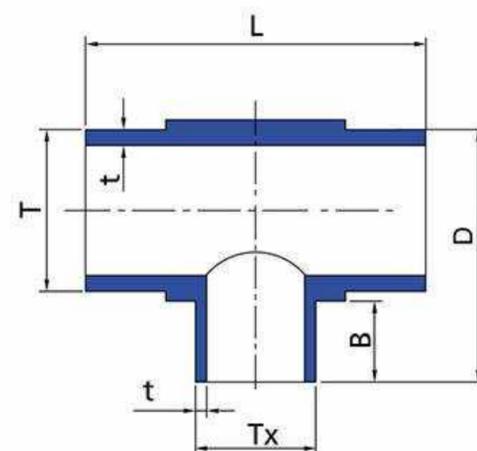

Артикул	L	B	T	D	t	Tx
RНТW-03-02	60.5	23	9.52	36	0.89	16.35
RНТW-04-02	64	23	12.7	39.9	1.24	6.35
RНТW-04-03	64	23	12.7	39.9	1.24	9.52
RНТW-06-03	76	23	19.05	51	1.65	6.35
RНТW-06-03	76	23	19.05	51	1.65	9.52
RНТW-06-04	76	23	19.05	51	1.65	12.7
RНТW-08-02	90	23	25.4	60	1.65	6.35
RНТW-08-03	90	23	25.4	60	1.65	9.52
RНТW-08-04	90	23	25.4	60	1.65	12.7
RНТW-08-06	90	23	25.4	60	1.65	19.05